


HOW TO INSTALL A SOAP POD IN A DISPENSER



TEMPORARY KEY

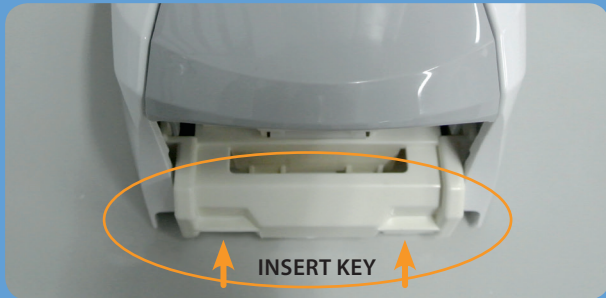

PERMANENT KEY

Step 1:

Open the front of the dispenser by pushing up at the bottom, and pulling the front cover at the same time. You will need to ensure that either the permanent key is in place or you use the temporary key to open the dispenser.

UP POSITION




DOWN POSITION



Step 2:

Remove the cap from 1 L pod, and make sure the tip is in 'up' position.

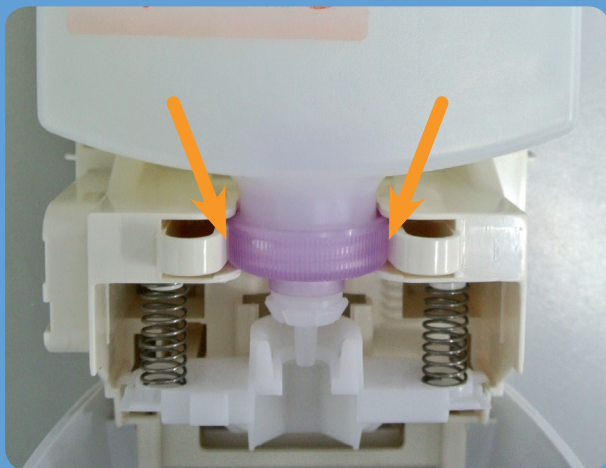

Step 3:

Align the lid of the pod with the locating points in the dispenser, and push it into dispenser points until you hear a 'click'.



Step 4:

Close door and push the lever down 3 times to prime the soap. Once primed, test to ensure soap is dispensing correctly.

Note - If pod needs to be removed for any reason whilst in use, make sure tip is removed gently, and put back into 'up' position to avoid breaking it.

ABN No. 24 000 906 678. NZBN: 9429041224243. (A division of Whiteley Corporation Pty Ltd)

19-23 Laverick Avenue, Tomago NSW Australia 2322

Phone: 1800 833 566 | www.whiteley.com.au

PO Box 204149, Highbrook, East Tamaki, Auckland 2161

Phone: 0800 257 352 | www.whiteley.co.nz

Whiteley 
Medical