




Fabripowr Plus

Carpet Extraction Detergent

Benefits:

- Spontaneous emulsification of oily soils
- Rapid soil penetration and dislodgment
- Safe on all carpet fibres
- Safe on all stain resists
- Built odour neutraliser
- Excellent detergency on natural & synthetic fibres
- Concentrated 1:40 pre-spray dilution
- Readily biodegradable
- New long lasting fragrance

Carpet Care

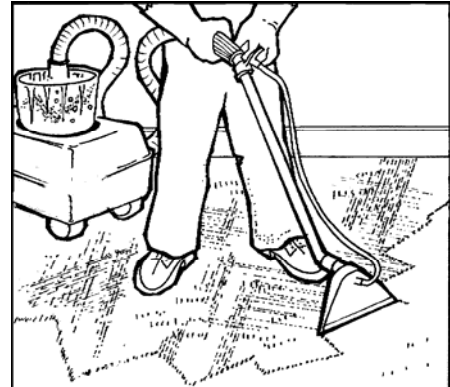

Fabripowr Plus has quickly become Australia's new leading carpet detergent. Only **Fabripowr Plus** offers superior cleaning performance without the use of alkaline boosters. **Fabripowr Plus** effectively substitutes for up to 5 different chemicals. **Fabripowr Plus** may be used as a carpet extraction detergent, carpet prespotter, odour suppressor and deodouriser. Only **Fabripowr Plus** offers carpet cleaners so much with the one carpet cleaning product.

Fabripowr Plus is suitable for use in both truck mount and portable carpet cleaning machines. **Fabripowr Plus** provides improved economy and cheaper dilution ratios due to its concentrated nonionic surfactant blend.

PRODUCT USE	DILUTION RATIO	APPLICATION
Prespray	Normal Soils: 1:40 with water Heavy Soils: 1:20 with water	Spray evenly over carpet with atomising spray. Allow to react for 10 to 15 minutes before extracting
Prespotter	Normal Soils: 1:5 with water	Apply to stain. Gently agitate working from the edge of the stain towards the centre. Soak with dry cloth or extract.
Injection Detergent	Normal Soils: 1:150 with water Heavy Soils: 1:100 with water	When prespraying, using as little as 1:250 dilution of Fabripowr Plus will improve soil removal.

Disposal: Please dispose of recovered waste water through an approved filter system

Technical Advice: For further information refer to Whiteley's **How To Clean** information for **Carpet Cleaning** located in the Industrial section of Whiteley's website, www.whiteley.com.au

10/04