




Fabrisolv

Solvent Spotter

Benefits:

- Uses natural terpene solvents
- Does not contain any petroleum solvents
- Fast acting, rapid penetration
- Non flammable
- Free rinsing

Carpet Care

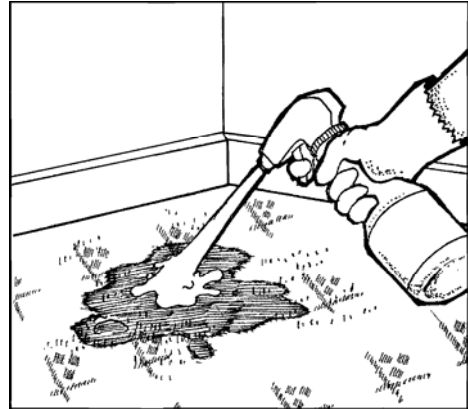

Fabrisolv is a new generation biodegradable D-Limonene based solvent spot remover. **Fabrisolv** is specifically designed for the removal of oil and solvent based stains such as paint, oil, grease, ink and lipstick etc.

Fabrisolv is a synergised combination of D-Limonene solvent and a surfactant blend which combine together to penetrate, remove and suspend all types of spots and stains in carpets. The unique combination of emulsifiable solvents in **Fabrisolv** make it soluble in water and as a consequence it is easier to use than straight solvent type products.

DIRECTIONS FOR USE:

Before using any solvent based spotter always test a small patch of carpet to ensure the solvent does not bleed any dye from the carpet fibres or cause any other unnecessary damage.

SPOT REMOVAL: Apply **Fabrisolv** undiluted to the spot. Using a small soft brush or cloth lightly scrub the spot starting from the outside of the spot and working towards the centre. Absorb as much **Fabrisolv** as possible from the carpet using an absorbent cloth. Then wet extract the remnants using **Fabripowr** or **Fabripowr Plus**.

LARGE AREAS: Mix 1 part of **Fabrisolv** to 10 parts water and spray on the carpet at a rate of approximately 4.5 litres per 20 square meters of carpet. The concentration may need to be increased on very heavily soiled carpets. Allow to soak for 10 to 15 minutes. Wet Extract **Fabrisolv** from the carpet using **Fabripowr** or **Fabripowr Plus**.

PRETESTING: Some aged and coloured stains may require special treatment therefore it is always advisable to pretest a small area first.

Technical Advice: For further information refer to Whiteley's **How To Clean** information for **Carpet Cleaning** located in the Industrial section of Whiteley's web-site, www.whiteley.com.au

10/04