




Storm

Floor Stripper

Hard Floor Care

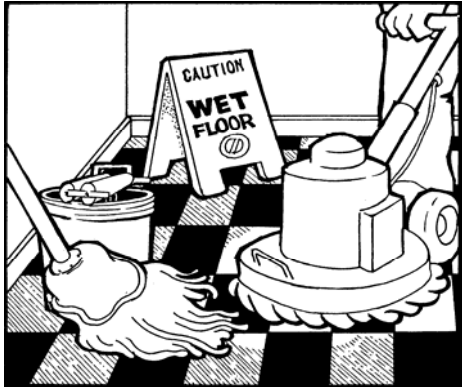

Benefits:

- Ultra High Performance Stripper
- Low odour
- Caustic and residue free
- Liquefies old sealers on contact
- Safe on most types of flooring

MOP IT ON AND WATCH IT WORK !

Storm is a new generation floor stripper designed to rapidly liquefy and emulsify old sealers for easy removal with an autoscrubber or mop and bucket. **Storm** contains a blend of glycol solvents that synergies with a rapid penetration dual chain emulsifier to penetrate the most stubborn old polish films.

Make sure to keep the surface wet at all times when stripping. **Storm** can be used on vinyl, vinyl asbestos, rubber, no-wax linoleum, lino tile, marble, terrazzo, ceramic quarry tiles and most types of flooring.

Storm is a fast, efficient, labour saving method for removing floor finishes and wax sealers with a minimum of scrubbing. **Storm** is a low odour ammonia free stripping system. **Storm** is caustic free and residue free.

DIRECTIONS: Depending upon the degree of sealer on the floor, **Storm** can be diluted as follows:

	Storm	Water
Heavy Build-up	1 part	4 parts
Moderate Build-up	1 part	6 parts
Light Build-up/	1 part	12 parts

Add recommended amount of **Storm** to **cold water** and apply liberally to the floor. Allow to work for 3 to 5 minutes, being sure to keep the floor wet. In most situations it is advisable to wet scrub the floor using a black pad on an autoscrubber or a low speed machine with a black pad. Pick-up the dissolved sealer with an autoscrubber or mop and bucket. Rinse the floor with clean water and allow the floor to dry before applying the sealer. Note that since **Storm** is residue free it is not absolutely necessary to rinse the floor after stripping.

Technical Advice: For further information refer to Whiteley's **How To Clean** information for **Stripping and Sealing Floors** and **Maintaining Sealed Floors** located in the Industrial section of Whiteley's web-site, www.whiteley.com.au