




# Superior Seal

## Vinyl Sealer Finish

### Benefits:

- Enriches floor colours
- Enhances clarity of finish
- Fills porous floors
- Provides strong adhesion to vinyl floors
- Improves powder resistance in cold weather
- Scuff and mark resistant
- Slip resistant

## Hard Floor Care

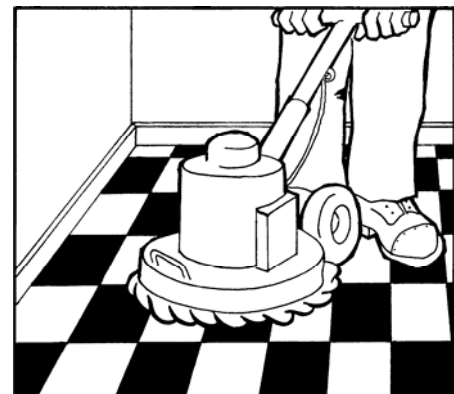

**For Use On:** Vinyl  
Terrazzo  
Slate  
Granite

**Superior Seal** is a clear, non-yellowing, high gloss sealer (base coat) designed to provide a strong, durable, wear resistant sealing system to all types of vinyl floors. **Superior Seal** conforms to the Australian Standard for the Slip Resistance of Pedestrian Surfaces AS 3661.

**Superior Seal** is a simple to use sealer/finish. **Superior Seal** reduces maintenance, inventory and training costs by simplifying maintenance programs.

**Superior Seal** provides a stable, powder resistant base for **Thermaglo Plus** and **Paragon** sealer finishes. **Superior Seal** enhances shine and film clarity by filling pores in the floor and providing excellent leveling properties. **Superior Seal** can also be used as a one step sealer finish.

**Preparation:** Remove old finish using **Storm** or **Zip Strip** floor strippers. To improve wetting and cleaning add 1 cup of **Tempo HD** or **Citron** neutral detergents to stripping solution. Wet scrub the floor using a high productivity black pad. When old finish has been removed pick-up with mop and bucket or autoscrubber containing clean potable water.

**Application:** Dry burnish floor before applying sealer. Apply 2 coats of **Superior Seal** followed by 2 to 4 coats of **Thermaglo Plus** or **Paragon** sealer finishes. Allow approximately 30 minutes drying time between coats.

**Maintenance:** Dust mop floor daily. Clean with **Tempo HD** or **Citron** neutral detergents. For best results spray buff weekly using **Start-Up** spray buffing compounds; alternatively use **Glokleen** (cleaner/maintainer) through an autoscrubber or in a mop and bucket.

**Technical Advice:** For further information refer to Whiteley's **How To Clean** information for **Stripping and Sealing Floors** and **Maintaining Sealed Floors** located in the Industrial section of Whiteley's web-site, [www.whiteley.com.au](http://www.whiteley.com.au)

10/04