




Surface Clean

Spray & Wipe

Benefits:

- Removes permanent markers
- Cuts through grease and soil
- Does not contain any Butyl Solvents
- Pleasant perfume

Food Service

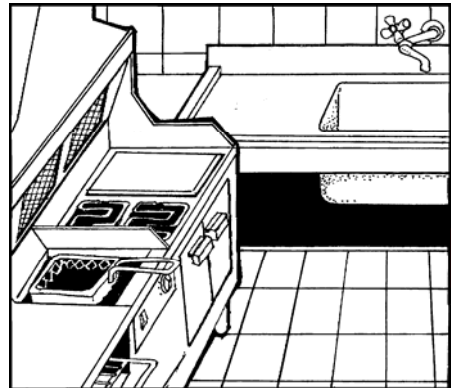

Surface Clean is a multipurpose spray and wipe type formulation specifically to remove difficult stains without the use of butyl solvents. **Surface Clean** exceeds the performance of competitive butyl cleaners without the use of hazardous chemicals.

Surface Clean effectively removes permanent markers from desk tops in schools and other areas. **Surface Clean** also effectively removes baked on proteins and foods, greases, oils, and most other types of soils. The high foaming detergent system used in **Surface Clean** assists in penetrating, removing and suspending difficult soils and stains.

Surface Clean may be used in kitchens, offices, healthcare, institutions, schools, commercial buildings, industrial and many other areas. **Surface Clean** is safe to use on most surfaces including, bench and counter tops, sinks and basins, stove tops, glass, porcelain, formica and stainless steel. **Surface Clean** is not suitable for use on painted surfaces.

Surface Clean also performs superbly as a concrete cleaner. The high foaming detergent system penetrates the porous concrete surface to lift and suspend in-ground, difficult to remove soils.

PRODUCT USE	DILUTION RATIO	APPLICATION
Spray & Wipe Permanent ink & heavy soils Normal soils Light Soils	Use undiluted 1: 5 with water 1: 10 with water	Spray Bottle Spray Bottle Spray Bottle
Concrete Cleaning Heavy Soils Normal Soils	1: 20 with water 1: 40 with water	Apply to floor and scrub with a brush

Technical Advice: For further information refer to Whiteley's **How To Clean** information for **Kitchens** and **Offices** located in the Industrial section of Whiteley's web-site, www.whiteley.com.au

10/04