




Thermaglo Plus Sealer Finish

Benefits:

- Easy to use wet look finish
- Burnishable from 250 rpm to 2000 rpm
- Use on almost any type of flooring
- Scuff and mark resistant
- Does not require a sealer on most floors
- Slip resistant

Hard Floor Care

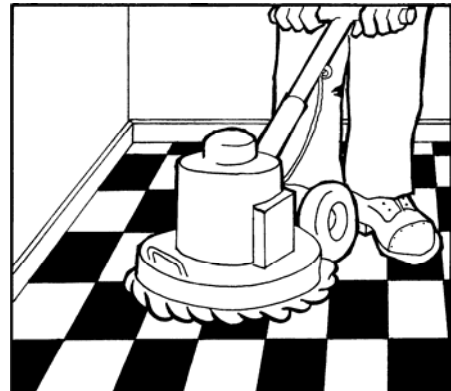

For Use On: Vinyl
Terrazzo
Timber

Thermaglo Plus is a clear, non-yellowing, high gloss finish designed to enrich and enhance the natural colours of all types of floors. **Thermaglo Plus** conforms to the Australian Standard for the Slip Resistance of Pedestrian Surfaces AS 3661.

Thermaglo Plus is a simple to use sealer / sealer finish designed for use on a variety of floors from vinyl to terrazzo and timber. **Thermaglo Plus** reduces maintenance, inventory and training costs in complex sites such as schools, universities, hospitals and healthcare by simplifying maintenance programs.

In institutional and office environments apply 4 to 6 coats of **Thermaglo Plus** to vinyl, terrazzo and timber floors.

In retail environments **Thermaglo Plus** may be applied as a one-step system or **Superior Seal** may be applied as a base sealer to enhance shine and film clarity.

Preparation: Remove old finish using **Storm** or **Zip Strip** floor strippers. To improve wetting and cleaning add 1 cup of **Tempo HD** or **Citron** neutral detergents to stripping solution. Wet scrub the floor using a high productivity black pad. When old finish has been removed pick-up with mop and bucket or autoscrubber containing clean potable water.

Application: Dry burnish floor before applying sealer. Apply either (i) 4 to 6 coats of **Thermaglo Plus** to freshly stripped floor or (ii) 2 coats of **Superior Seal** followed by 2 to 4 coats of **Thermaglo Plus**. Allow approximately 30 minutes drying time between coats.

Maintenance: Dust mop floor daily. Clean with **Tempo HD** or **Citron** neutral detergents. For best results spray buff weekly using **Start-Up** spray buffing compounds; alternatively use **Glokleen** (cleaner/maintainer) through an autoscrubber or in a mop and bucket

Technical Advice: For further information refer to Whiteley's **How To Clean** information for **Stripping and Sealing Floors** and **Maintaining Sealed Floors** located in the Industrial section of Whiteley's web-site, www.whiteley.com.au

10/04