




Timberglo

Timber Sealer

Hard Floor Care

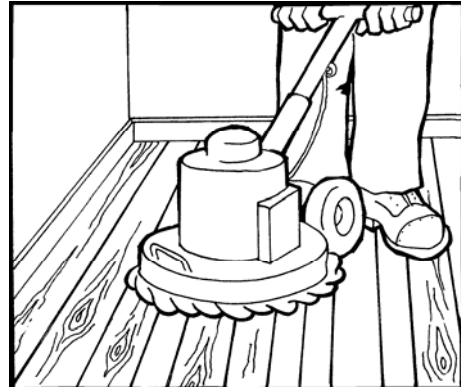

**For Use On: Timber
Parquetry
Cork**

Benefits:

- Sand & Seal in one day
- One-step sealing system
- Burnishable from 400 rpm to 2000+ rpm
- Scuff and mark resistant
- Repairable & patchable
- Slip resistant

Performance: **Timberglo** is an easy to use one-step timber sealer designed for use on all types of timber floors. **Timberglo** is a clear, non-yellowing, high gloss timber sealer designed to enrich and enhance the natural colours of all types of timber floors. **Timberglo** conforms to the Australian Standard for the Slip Resistance of Pedestrian Surfaces AS 3661.

Timberglo is a simple to use one step sealing system. **Timberglo** requires only 1-hour drying time between coats enabling timber floors to be sanded and sealed in only one day.

Timberglo reduces maintenance, inventory, downtime and training costs associated with the cleaning and maintenance of timber floors.

WARNING: If applied to timber floors where wax polishes have been previously used, ensure old wax is completely removed by scrubbing the floor with mineral turpentine before using **Timberglo**. Failure to completely remove wax polishes may cause poor adhesion, peeling and powdering.

Preparation:

1. Sand floor with 120 mesh sanding disc. Thoroughly Vacuum and dust mop floor.
2. If a solvent wax polish was previously used, scrub with Surface Reviver at 1:4 dilution with water. Rinse floor with dilute detergent water and allow to dry.
3. If a water-based wax polish was previously used, scrub with **Zip Strip** or **Storm** at 1:4 dilution with water. Rinse floor with dilute detergent water and allow to dry.

Application:

1. Apply 3 to 4 coats of **Timberglo** with a weighted bar applicator, lambswool applicator or mop and bucket. Allow approximately 1 hour drying time between coats.

Maintenance:

1. Dust mop floor daily. Clean with **Tempo HD** or **Citron** neutral detergents.
2. For best results spray buff on a weekly basis using **Start Up** spray buffing compounds.

Technical Advice: For further information refer to Whiteley's **How To Clean** information for **Stripping and Sealing Floors** and **Maintaining Sealed Floors** located in the Industrial section of Whiteley's web-site, www.whiteley.com.au

10/04